 


The buttons on the remote control replicate the buttons on the Manual control. Turn the fire on via the master control and then use the remote to operate the appliance. The appliance can be left in standby mode if required.




Manual Operation:

To turn the fire on press the RED button—this will illuminate the flame effect, an audible sound will be heard which will confirm the operation.
To operate the heater press button I this will operate the heater on 1 kW. To turn the heater onto high heat press Button II (2 kW). To switch the heat off press button I this will leave the flame effect on. To turn the flame effect off press the RED button.
To turn power off to the fire switch the Master switch to position 0. Note: Turning the Master switch to off DOES NOT isolate the appliance from the mains.

The master switch (mounted behind the ash pan cover) marked (0—I) turns on the fire and places it in remote control mode. Further operations now require the use of the remote handset or the manual touch pad located behind the ash pan cover.

CONTROLS

Your fire comes complete with loose coals or pebbles that these are rinsed under cold water and dried thoroughly before placing on the fuel bed. After checking the fire is working correctly the coals or pebbles can be placed on top of the fuel effect.

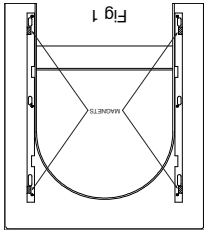

Setting up the Coal / Pebble effect..
Remove the cast front and ash pan from the packaging. Ensure the magnets on the frame are positioned as shown in Fig 1.
Position the frame to the fire ensuring the Cast frame sits fully around the stove frame of the fire and is held firmly with the magnets. The ash pan cover sits free standing at the bottom of the fire.
Your fire comes complete with loose coals or pebbles which have been pre washed. It is however recommended that these are rinsed under cold water and dried thoroughly before placing on the fuel bed. After checking the fire is working correctly the coals or pebbles can be placed on top of the fuel effect.

THIS FIRE MUST BE INSTALLED IN A FIREPLACE OPENING AND SECURED USING APPROPRIATE WALL FIXINGS
Your PUREGLOW fire is designed to fit a standard 16"(410mm) fireplace opening. Before installing, thoroughly clean the fireplace and ensure debris and dust cannot enter the fire from the chimney. Ensure the fire stands on a smooth level surface. Position the fire in the opening and mark through the stove frame fixed to the fire the 4 off fixing points. Remove the fire if necessary, drill & fit appropriate wall fixings. Re-fit fire to the opening and secure to opening using 4 off appropriate screws.

FIREPLACE INSTALLATION

2



Packing list


Glove	
Coal Pack	
Pebble Pack	
Cast Frame	
Remote Handset + Batteries	

Affix Second Data Label HERE

Packed By

Date

Model Type Pureglow 2kW

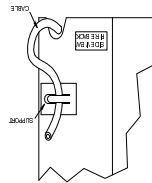

Transit Cable Clip: The mains cable is attached to the fire by means of a clip for transit purposes - If necessary the cable can be removed from this clip. NOTE: If the fire is mounted on a hearth that extends to the rear of the fire, ensure that the mains cable is not trapped between the base of the fire and the hearth - always ensure that the cable is located in the slot provided in the side of the fire.

- Do not use this heater with an external programme controller, thermal control, timer or any other device which switches the heater on automatically as a fire risk may occur if the heater has been accidentally covered or moved.
- The heater should not be used immediately below a socket outlet.
- Do not use in the immediate surroundings of a bath, shower or swimming pool.
- Do not cover or hang clothes, towels etc over or near the heater as this could cause over heating and possible damage.
- Always install the fire so that the plug is accessible.

kit the appliance must be connected to a readily accessible fused isolator. For Fires fixed into a surround with suitable fixing by the letter L or coloured Red. The wire which is marked by the letter N or coloured Black. The wire which is marked by the letter E or by the earth symbol which is marked by the letter Y or coloured Green/Yellow. The wire which is coloured Green/Yellow must be connected to the terminal in the plug which is coloured Green/Yellow. The wire which is coloured Blue must be connected to the terminal in the plug which is coloured Blue. The wire which is marked by the letter L or coloured Red.

The wires in the mains supply cord are coloured in accordance with the following code: Green and Yellow = Earth, Blue = Neutral, Brown = Live.
If your fire is fitted with a moulded on mains plug which is not suitable for the socket elsewhere in the house. To avoid this it should be disposed of immediately.
Note: A plug cut off from a flexible cord will give a shock hazard if inserted in a 13 amp outlets in your home, the plug must be cut off and an appropriate one fitted.
If you are fitting an alternative type of plug then the colours of the wires in the mains cord may not correspond with the identifying markings on the plug terminals. In this case proceed as follows:

THIS APPLIANCE MUST BE EARTHED
Check that the voltage stamped on the rating label of your fire at the rear is the same as your house electricity supply which must be AC (alternating current). The mains cord of the fire has a UK type plug fitted with a 13amp fuse. When replacing a fuse, use a 13amp fuse approved to BS 1362. The fuse cover of a moulded on plug must be refitted when changing the fuse. Should the fuse cover become lost, the plug must not be used until the correct replacement fuse cover is obtained from your service agent.

ELECTRICAL INSTALLATION

1

Installation and Maintenance Instructions

Annabelle, Chloe, Juliet, Churchill, Zara, Carmen Electric Fires

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Your PUREGLOW electric fire has been made with great care. Here are some instructions including cleaning and maintenance, which will help you keep your fire in good condition for many years. If you experience any parts or service problems contact either your retailer or PURE GLOW LIMITED.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or Instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This is an amendment to the standard and now applies to all EN60335 items.

PURE GLOW LIMITED

Stour Vale Road
Lye, Stourbridge, DY9 8PP
Telephone: +441384 893060
Fax: +441384 897728
Email: info@pureglowltd.co.uk
Web: www.pureglowltd.co.uk



3

THE MAIN HEAT OUTLET IS UNDERNEATH THE CANOPY. DO NOT TOUCH OR PLACE ANY MATERIAL IN THIS AREA WHEN THE FIRE HAS RECENTLY BEEN IN USE OR WHILST TURNED ON.

GENERAL CLEANING

DISCONNECT THE FIRE FROM THE SUPPLY BEFORE CLEANING OR CARRYING OUT ANY MAINTENANCE CLEANING

It is recommended that the air inlet located beneath the canopy be vacuumed regularly to prevent build up of dust. (See Fig 2)

Warning: If the air inlet becomes covered with dust the fire may cut out. This is a safety feature. If this occurs then refer to section 4 IMPORTANT INFORMATION.

Screen

The nature of the screen material can cause static. It is important that any cleaning preparation used on the screen contains anti-static properties. It is not recommended that the screen is removed from the fire, however if this is required please follow the maintenance procedure at the rear of this manual.

Decorative parts

Under no circumstances use an abrasive cleaner on bright surfaces. Such use will cause permanent damage to the appearance of your fire.

It is important to use care in cleaning. Dusting or wiping with a dry cloth is recommended.

Fuel Effect: Clean with a vacuum cleaner attachment or a soft brush.

Remote Handset Battery Replacement

To replace the batteries in the remote handset remove the battery compartment cover and remove the batteries. Replace the batteries with either rechargeable or non rechargeable batteries of type : AAA , MN2400, LR23, UM4 DO NOT MIX Rechargeable and Non rechargeable batteries.

Care


Do not drop—Do not immerse in liquids -Clean only with a dry cloth -Do not leave flat batteries in the unit.

As this product operates using infra-red, ensure there is a clear line of sight between the handset and the appliance to operate effectively

To avoid risk of explosion, never throw batteries into a fire or expose batteries to other strong heat sources.

DO NOT SWALLOW. If a battery is swallowed you should seek immediate medical attention.

DO NOT throw this battery into your normal household waste. Once the battery has reached the end of it's life it should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.

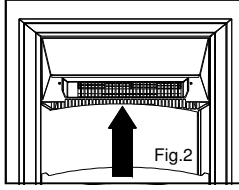


4

LAMP REPLACEMENT

TURN OFF APPLIANCE AT MAINS AND UNPLUG FROM SOCKET

Remove any loose coal or pebbles from the fuel support and remove the cast trim from the front of fire which is held in place by the four magnets.

Remove the fuel support by pulling forward and then Pull the plastic light guard forward from the centre to release it from each side of the fire frame.

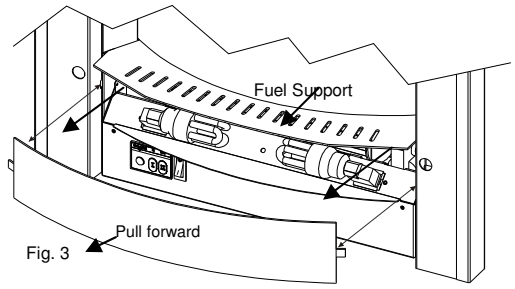

This will then give access to the two lamps. Ensure that the lamps are cool before removing.

Unscrew the lamps in an anti-clockwise direction

After replacing lamps replace the fuel support by sliding it under the screen, then replace the light guard by inserting one of the tabs located on the end into the slot in the frame then insert the opposite tab into the slot in the frame on the opposite side.

Replace the cast trim ensuring it is properly located and secure with the magnet fixings before placing the ash pan cover in place.

Then replace coals or pebbles back into position.

IMPORTANT INFORMATION

SAFETY CUT- OUT

The heating element is fitted with a cut-out which will switch off the fire if it overheats. Should this occur follow the points below.

1. Switch the fire off at the wall outlet
2. Ensure that there are no obstructions in or around the air inlet see Fig, 2
3. After approximately 5 minutes switch the fire on.
(The thermal cut-out will take approximately 5 minutes to reset once activated - do not switch the fire on until the above checks have been completed.
4. If the fault persists contact your retailer or Pure Glow Electric Customer Service on the telephone numbers provided at the beginning of these instructions.

5

MAINTENANCE:

It is recommended that the fire is cleaned on a regular basis to prevent build up of dust and fluff which will reduce the performance of the product.

It is not recommended that any part of the fire is removed other than those parts specified earlier in the instructions, however under certain circumstances the nature of the screen material can cause static and therefore may attract dust and therefore requires cleaning. If this happens please follow the procedure below to clean the screen.

NOTE: It is important that any cleaning preparations used on the screen contain "anti-static" properties

1. Remove the fire fret—follow the procedure for lamp replacement.
2. Remove the plastic fuel support - follow the procedure for lamp replacement.
3. The screen is contained in the fire by the two chrome reflectors at each side of the fire. Hold the screen with one hand at the side and with the other hand gently pull the screen forward from the centre. The screen will release from the side reflector. Note: Care should be taken when removing the screen so as not to scratch the side reflectors.
4. Reverse the procedure for replacement ensuring that the printed side (Matt Finish) of the screen faces the rear of the fire

For any other maintenance contact your nearest stockist.

Item	Part Number	Quantity per Fire
Low Wattage CFL 7-9 w Lamp	100150	2
Screen	100105	1
Fuel Coal	101426	1 bag
White Pebbles	100140	3 bags
Amber fuel bed	100560	1
Battery Pack (AAA , MN2400, LR23, UM4)	100572	1
Remote Kit with extended sensor	100558	1
Mains Cord UK Plug MAINS CORD: If the mains supply cord is damaged it must be replaced by a competent electrician or similarly qualified person.	100134	1

6

GUARANTEE

This product is guaranteed against faulty parts or workmanship for 12 months from the date of purchase. This guarantee does not extend to light bulbs which are considered consumable items.

To validate the guarantee the product must be returned to the retailer or supplier for repair or replacement with this sheet completed with the detail requested. (Please do not send a photocopy).

Pure Glow Limited are not responsible for any cost incurred by the customer in returning the product to the seller.

When making a claim under warranty you must provide the above details requested your warranty might be invalid. Return this information to your dealer or contact Pure Glow Limited.

Pure Glow Limited reserves the right to refuse warranty for any product returned that does not have valid proof of date of purchase:

Please return your original sales invoice with any returned product.

This guarantee does not effect your statutory rights.

Date of Purchase	Enclosed original sales invoice. <input type="checkbox"/> YES <input type="checkbox"/> NO
------------------	--

Retailer name and address

Your name and address

The Symbol shown here and on the product indicates that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

Product Disposal Instructions: When you have no further use for the product, please dispose the product at your local authorities recycling centre. For business users Do Not dispose of the product with normal commercial waste.

